 



Domino SWT-U Storm Water Transfer Under Ground

Harvested Rainwater for use in top-up applications generally requires filtration prior to use in a company's process. Car & Truck wash equipment using Reverse Osmosis (RO) for their spot free final rinse generally require that harvested water be filtered to 1 micron prior to entering the RO process.

Everything Water's Storm Water Transfer systems are skid mounted and can be installed next to the water tanks or in a plant room. A storage (break) tank is installed in the plant room and our level regulator calls the water on demand. A separate level regulator installed in the harvesting tank at low level, isolates the pump from activation and as the water level in the break tank falls, a ball float will activate a mains top up to ensure continuation of supply.

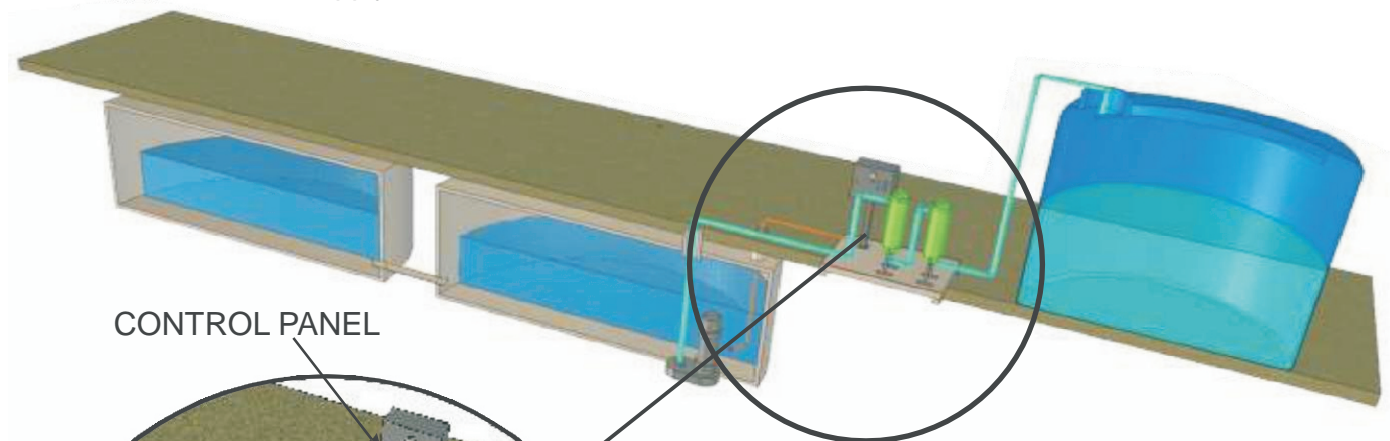

 CONTROL PANEL

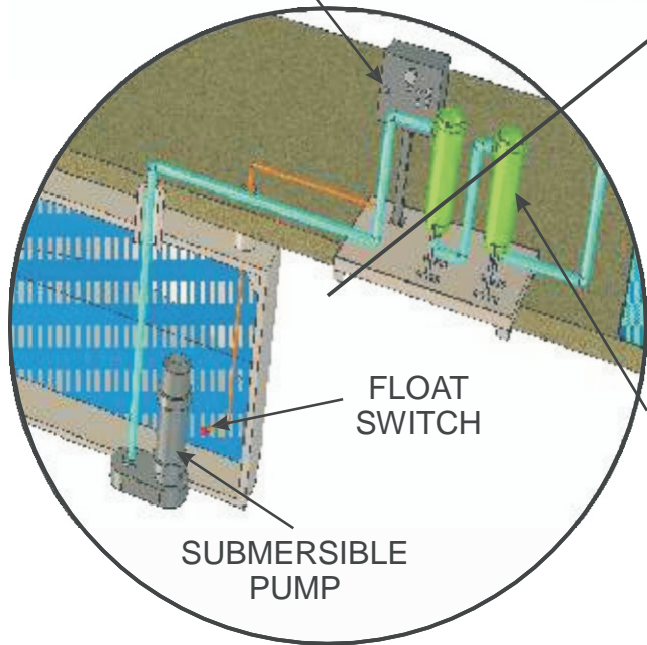


FLOAT SWITCH

SUBMERSIBLE PUMP

BAG FILTERS TO 1 MICRON

Features

- Low running costs
- Filtration to 1 micron
- Scalable. Base unit capacity can easily be upgraded to suit your needs.
- Small Footprint

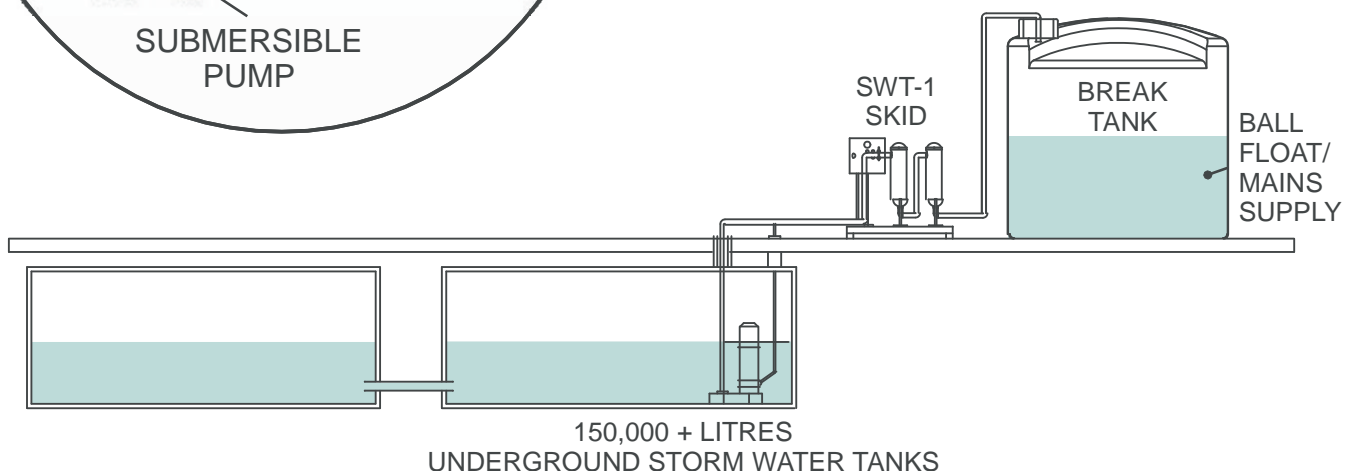

Everything Water PTY LTD

VICTORIA

7 Ventnor Street, Balwyn North VIC 3104
+ Phone: +61 3 9857 9845 Fax: +61 3 9857 9445
+ Email: terryb@everythingwater.com

 
 
QUEENSLAND

Unit 3/32 Enterprise Street, Cleveland, QLD, 4163
+ Phone: +61 (7) 3821 6922 Fax: +61 7 3286 5077
+ Email: sales@everythingwater.com

Domino SWT-A Storm Water Transfer Above Ground

Harvested Rainwater for use in top-up applications generally requires filtration prior to use in a company's process. Car & Truck wash equipment using Reverse Osmosis (RO) for their spot free final rinse generally require that harvested water be filtered to 1 micron prior to entering the RO process.

Everything Water's Storm Water Transfer systems are skid mounted and can be installed next to the water tanks or in a plant room. A storage (break) tank is installed in the plant room and our level regulator calls the water on demand. A separate level regulator installed in the harvesting tank at low level, isolates the pump from activation and as the water level in the break tank falls, a ball float will activate a mains top up to ensure continuation of supply.

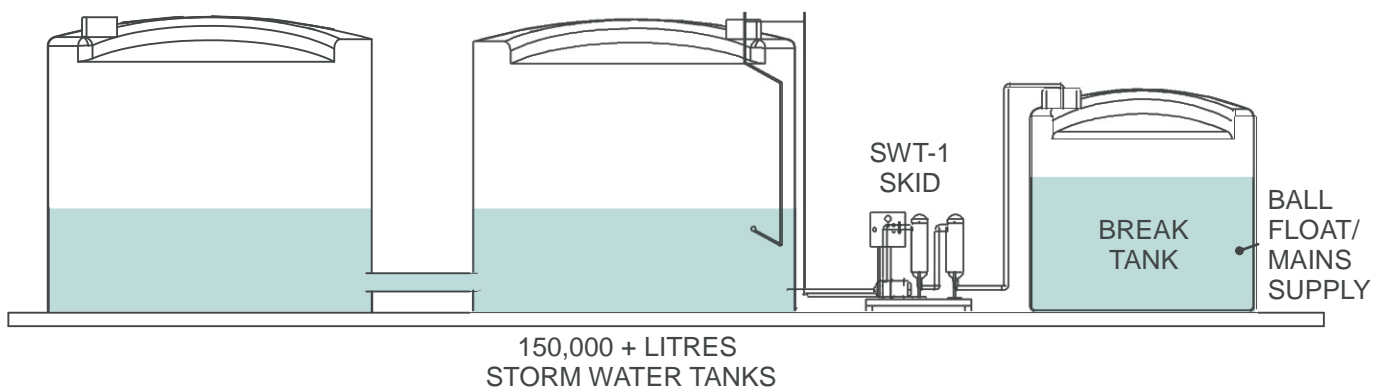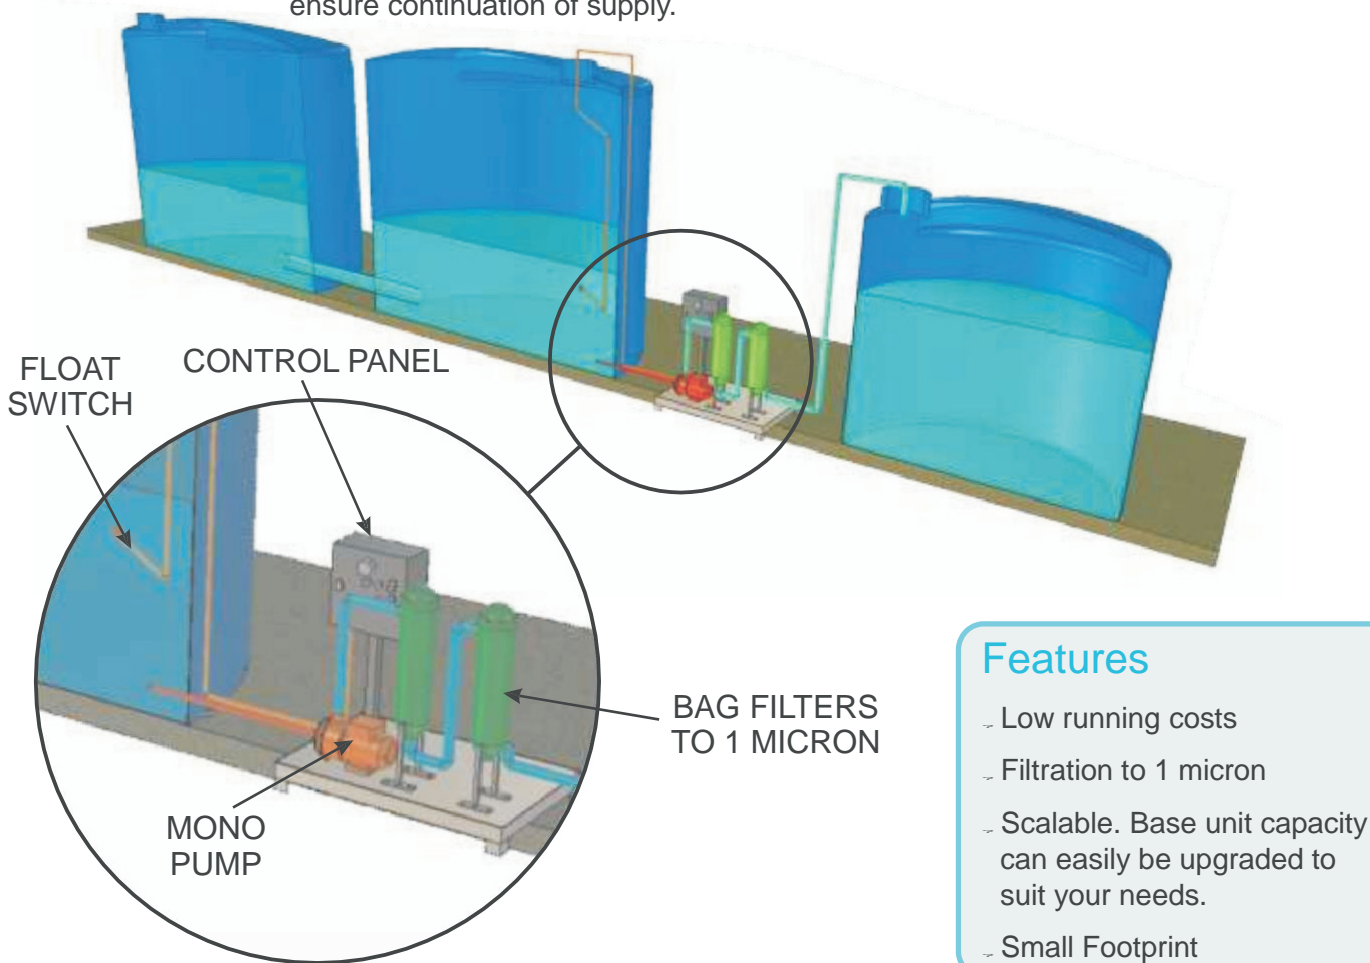

Everything Water PTY LTD

VICTORIA

7 Ventnor Street, Balwyn North VIC 3104
 + Phone: +61 3 9857 9845 Fax: +61 3 9857 9445
 + Email: terryb@everythingwater.com

QUEENSLAND

Unit 3/32 Enterprise Street, Cleveland, QLD, 4163
 + Phone: +61 (7) 3821 6922 Fax: +61 7 3286 5077
 + Email: sales@everythingwater.com